

FIP-400

NETWORK TESTING—OPTICAL




Highly versatile probe to detect dirty/damaged connectors with unparalleled precision

- Easy back-panel connector inspection
- Truly rugged and lightweight solution for the field
- Image-capture capability for report documentation
- Ideal for all types of connectors: APC, UPC, MTP and more
- Slim design for easy use in crowded patch panels
- Compatible with EXFO test instruments

Zoom In on Clarity

It's a known fact: optical network problems are often caused by dirty and/or damaged connectors. Using a fiber inspection probe to ensure that connectors/adapters are clean and exempt of any defect is where accurate testing starts.


Thanks to EXFO's FIP-400 Fiber Inspection Probe, checking connectors and other fiber terminations for polish quality and cleanliness has never been easier. Benefit from the best optical resolution in the industry and see scratches and dirt particles as small as 1 μm . Also, use a USB converter to send image captures to a portable platform or a PC.

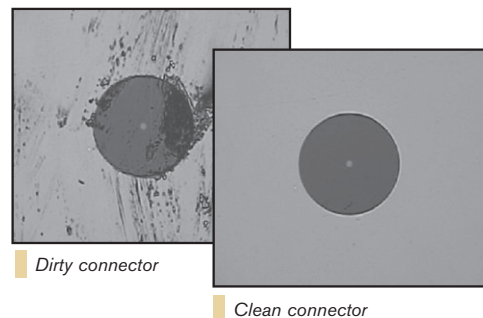

Fiber Probe Viewer



Video Inspection Probe

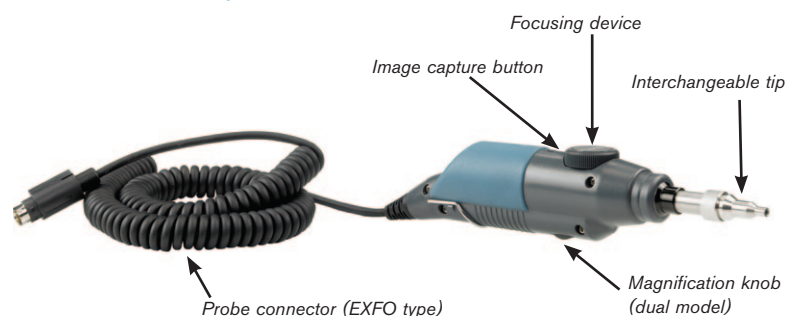

ConnectorMax Analysis Software

Automatic pass/fail analysis with multiple-platform flexibility

- Available on the portable FTB-1, FTB-200 and FTB-500 platforms

Save time and money

- Lightning-fast results in seconds through simple one-touch operation

Complete test reports for future referencing

- Stores images and results for record-keeping



Delivering fast pass/fail assessment of connector endfaces, EXFO's ConnectorMax Analysis Software is designed to save both time and money in the field. The industry's first platform-based, automated inspection application, ConnectorMax eliminates guesswork, instead providing clear-cut connector endface analysis.

ConnectorMax enables field technicians to analyze defects and scratches and measure their impact on connector performance. Results are then compared against pre-programmed IEC/IPC standards or user-defined criteria, leading to accurate pass/fail verdicts established right on-site.

ConnectorMax therefore helps avoid two time- and money-consuming situations: undetected connector defects that force technicians to later return to the site, and unnecessary replacement of connectors whose slight defects are not enough to get a "fail" verdict.

The Industry's Most Versatile Probe

With EXFO's FIP-400, you have the choice—you can either use it with a PC, with one of our test sets or with our lightweight, handheld monitor. Choose the way that works best for you.



Applications

Patchcord inspection

- Compatible with a wide range of connector types
- Offers great optical performance for patchcord quality assurance
- Use it as a stand-alone unit to perform field applications or with a USB adapter in a manufacturing environment

Patch panel bulkhead inspection

- Get a clear view of both sides of an interconnection
- Inspect hard-to-reach connectors without stressing adjacent fibers, thanks to the FIP-400's slim design

Single-fiber connector inspection

- Compatible with 1.25 mm and 2.5 mm angled-polished and ultra-polished connectors (APC and UPC)

Multifiber connector inspection

- Compatible with male and female ribbon connectors such as MTP multifiber APC and UPC connectors

Connection inspection through ConnectorMax Analysis Software

- Delivers clear-cut pass/fail verdicts, eliminating guesswork in the field and helping you save time and money
- Lightning-fast: results in 4 seconds through simple one-touch operation
- Full test reports for future referencing



Patchcord inspection in a manufacturing environment



Patch panel bulkhead inspection

SPECIFICATIONS

Video Inspection Probe

Size (H x W x D)	without tip cap 38 mm x 32 mm x 170 mm (1 1/2 in x 1 1/4 in x 6 11/16 in) with tip cap 38 mm x 32 mm x 200 mm (1 1/2 in x 1 1/4 in x 7 3/4 in)
Weight	0.2 kg (0.44 lb)
Resolution	Theoretical < 2 µm, detection capability < 1 µm
Field of view	625 µm x 464 µm (low magnification) ^a 412 µm x 306 µm (high magnification)
Light source	Blue LED
Lighting technique	Coaxial
Capture button ^b	Present on all models
Connector	EXFO probe port type (8 pin mini-DIN)
Focus control	Adjustable on the probe
Optical magnification	Adjustable, low and high (dual model only)

Fiber Probe Viewer

Size (H x W x D)	50 mm x 99 mm x 190 mm (1 15/16 in x 3 7/8 in x 7 1/2 in)
Weight ^c	0.3 kg (0.66 lb)
LCD screen	3.5 in TFT active matrix (320 x 240 pixels)
Power	Rechargeable Li-ion battery or AC adapter/charger
Battery life	3 hours (continuous use)
Charging time	4 hours
Connector	EXFO probe port type (8 pin mini-DIN)

USB Converter

	USB 1.1 Model	USB 2.0 Model
Size (H x W x D)	20 mm x 36 mm x 90 mm (13/16 in x 1 7/16 in x 3 9/16 in) (9/4 in x 1 7/16 in x 3 3/4 in)	19 mm x 36 mm x 95 mm
Connectors	EXFO probe port type (8 pin mini-DIN)/USB	
Capture button	No	Yes

GENERAL SPECIFICATIONS

Temperature	
operating	-10 °C to 50 °C
storage	-40 °C to 70 °C
Relative humidity	0 % to 95 % non-condensing

ORDERING INFORMATION

FIP-400-XX-XX

Model ■

FIP-400-P-SINGLE = Video inspection probe
Single magnification

FIP-400-P-DUAL = Video inspection probe
Dual magnification

FIP-400-D = Handheld display

FIP-400-USB1 = USB1 converter with software,
compatible with FTB-400 and IQS-500

FIP-400-USB2 = USB2 converter with software for PC^e,
FTB-500^d and IQS-600

FIP-400-USB

■ Extra Adapter Tips^d

00 = Without extra FIP-400 tip

FIPT-400-LC-K

FIPT-400-25A-K

FIPT-400-ADAPTER = Adapter tip

FIPT-400-D4 = D4 tip for bulkhead adapter

FIPT-400-E2000 = E-2000 tip for bulkhead adapter

FIPT-400-E2000-APC = E2000 APC tip for bulkhead adapter

FIPT-400-FC-SC-A6 = FC and SC angled tip for bulkhead (60 degree)

FIPT-400-FC-SC-APC = FC and SC APC tip for bulkhead adapter

FIPT-400-LC = LC tip for bulkhead adapter

FIPT-400-LC-A6 = LC angled tip for bulkhead adapter (60 degree)

FIPT-400-LC-APC = LC/APC tip for bulkhead adapter

FIPT-400-LEMO = LEMO tip for bulkhead adapter

FIPT-400-LX5-APC = LX.5/APC tip for bulkhead adapter

FIPT-400-MTP2 = MTP2 tip for bulkhead adapter (extended, reversible)

FIPT-400-MTP2-K = MTP, APC and UPC tips for bulkhead adapter
(extended, reversible)

FIPT-400-MTPA-TIP = MTPA replaceable nozzle for MTP2
(extended, reversible)

FIPT-400-MTPA2 = MTP/APC tip for bulkhead adapter
(extended, reversible)

FIPT-400-MTP2-TIP = MTP2 replaceable nozzle for MTP2
(extended, reversible)

FIPT-400-MU = MU tip for bulkhead adapter

FIPT-400-MU-L = MU tip for bulkhead adapter (extended)

FIPT-400-OTAP-APC = OptiTap™ bulkhead adapter

FIPT-400-OTIP-MT-APC = MT/APC type OptiTip™ for male
and female connectors

FIPT-400-OTIP-MT-APC/M = Male adapter tube for
FIPT-400-OTIP-MT-APC tip

FIPT-400-SC-L = SC tip for bulkhead adapter (extended)

FIPT-400-ST = ST tip for bulkhead adapter

FIPT-400-U12M = Universal patchcord tip for 1.25 mm ferrule

FIPT-400-U12MA = Universal patchcord tip for 1.25mm APC ferrule

FIPT-400-U20M2 = Universal patchcord tip for 2.0 mm ferrule (P4, LEMO)

FIPT-400-U25MA = Universal patchcord tip for 2.5 mm APC ferrule

Example: FIP-400-P-SINGLE-FIPT-400-LX5-APC

OPTIONAL ACCESSORIES

FIPT-BOX = Plastic case divided into various compartments for tips

GP-1001 = Rechargeable battery for handheld display

GP-10-073 = Soft carrying case for inspection probe, display and accessories

NOTES

a. Dual model only

b. Works with USB 2.0 adapter, FOT-930 and FTB-200

c. Without battery

d. FTB-500 minimum Toolbox software requirement: 6.28 or higher

e. May require USB1 or USB2 depending on user's PC

STANDARD ACCESSORIES

■ Video inspection probe (single or dual magnification)

■ FC-SC tip for bulkhead

■ U25M universal patchcord tip for 2.5 mm ferrule

■ Plastic case divided into various compartments for tips

EXFO Corporate Headquarters > 400 Godin Avenue, Quebec City (Quebec) G1M 2K2 CANADA | Tel.: +1 418 683-0211 | Fax: +1 418 683-2170 | info@EXFO.com

Toll-free: +1 800 663-3936 (USA and Canada) | www.EXFO.com

EXFO America	3701 Plano Parkway, Suite 160 Plano, TX 75075 USA	Tel.: +1 800 663-3936	Fax: +1 972 836-0164
EXFO Asia	100 Beach Road, #22-01/03 Shaw Tower SINGAPORE 189702	Tel.: +65 6333 8241	Fax: +65 6333 8242
EXFO China	36 North, 3 rd Ring Road East, Dongcheng District Room 1207, Tower C, Global Trade Center Beijing 100013 P. R. CHINA	Tel.: +86 10 5825 7755	Fax: +86 10 5825 7722
EXFO Europe	Omega Enterprise Park, Electron Way Chandlers Ford, Hampshire S053 4SE ENGLAND	Tel.: +44 2380 246810	Fax: +44 2380 246801
EXFO NetHawk	Elektroniikkatie 2 FI-90590 Oulu, FINLAND	Tel.: +358 (0)403 010 300	Fax: +358 (0)8 564 5203
EXFO Service Assurance	270 Billerica Road Chelmsford, MA 01824 USA	Tel.: +1 978 367-5600	Fax: +1 978 367-5700

EXFO is certified ISO 9001 and attests to the quality of these products. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. EXFO has made every effort to ensure that the information contained in this specification sheet is accurate. However, we accept no responsibility for any errors or omissions, and we reserve the right to modify design, characteristics and products at any time without obligation. Units of measurement in this document conform to SI standards and practices. In addition, all of EXFO's manufactured products are compliant with the European Union's WEEE directive. For more information, please visit www.EXFO.com/recycle. Contact EXFO for prices and availability or to obtain the phone number of your local EXFO distributor.

For the most recent version of this spec sheet, please go to the EXFO website at <http://www.EXFO.com/specs>

In case of discrepancy, the Web version takes precedence over any printed literature.