

iConverter RS422/485 DB-9 Models					
Fiber Type / Dual Fiber [DF] or Single-Fiber [SF] / Wavelength	Distance	Fiber Connector Types			
		ST	SC	MT-RJ	LC
MM/DF/1310nm	5km	8780-0	8782-0	8784-0	8786-0
SM/DF/1310nm	30km	8781-1	8783-1	8785-1	8787-1
SM/DF/1310nm	60km	8781-2	8783-2	-	8787-2
SM/DF/1550nm	120km	-	8783-3	-	8787-3

iConverter RS422/485 Single-Fiber Models					
SMSF / Tx 1550/Rx 1550	Distance	-	-		
			8790-1*	-	-
SMSF / Tx 1550/Rx 1310	20km	-	8791-1*	-	-
SMSF / Tx 1310/Rx 1550	40km	-	8790-2*	-	-
SMSF / Tx 1550/Rx 1310	40km	-	8791-2*	-	-

For wide temperature (-40 to 60°C), add a "W" to the end of the model number. Consult factory for extended temperature (-40 to 75°C) models.

\*When using single-fiber (SF) media converter models, the Tx wavelength on one end has to match the Rx wavelength on the other.

When ordering module with terminal block serial port, append "T" before the dash "-" in the model number. Examples: 8780T-0, 8783T-3

**OVERVIEW:**

The Omnitron *iConverter* RS422/485 is a manageable serial RS-422 or RS-485 to fiber converter that transmits serial protocol over fiber media. Fiber transmission extends serial signals up to 120km and protects against electrical and magnetic interference.

The RS422/485 is available with a single-mode, multimode or single-fiber transceiver. The serial port interface is available with a DB-9 female connector or terminal block connector for field wiring.

The RS422/485 automatically detects the signal baud rate of the connected point-to-point Full-Duplex RS-422 serial devices, ranging from 110 to 921,600 baud. The RS422/485 also automatically adjusts to changes in the point-to-point Full-Duplex RS-422 baud rate during operation, without interrupting the data service. Connection to DTE or DCE Full-Duplex point-to-point RS-422 devices is configured by an easily accessible DIP-Switch on the front-panel.

Half-Duplex RS-485 and Full-Duplex RS-485 (sometimes referred as Multi-point RS-422) operation is supported via a configurable baud rate DIP-Switch to match the master/slave communication timing.

A built-in remote Fiber Loop-Back DIP-Switch provides easy validation of the fiber segment. The Loop-Back does not interrupt signal transmission over the fiber.

Built-in configurable terminators support Full-Duplex and Half-Duplex operations, allowing the unit to be deployed and terminated at any node in the serial line.

The RS422/485 is designed to work in any *iConverter* chassis. When installed in a multi-module chassis with an *iConverter* Management Module, the RS422/485 can be remotely monitored and managed by software control. Management is supported on the *iConverter* 19-Module, 5-Module and 2-Module chassis. The 1-Module chassis supports RS422/485 as a standalone serial to fiber converter.


**Note that software control for remote configuration of the RS422/485 requires a multi-module chassis with an *iConverter* Management Module, such as the Network Management Module (NMM).**

"NORM" position (factory default), the RS422/485 operates in a point-to-point Full-Duplex mode, commonly used by the RS-422 protocol. Baud rate selection is automatic in this mode.

When this DIP-Switch is in the RIGHT "MP" position, the RS422/485 operates in a Multi-point Full-Duplex mode, often referred as Full-Duplex RS-485 or Multi-point RS-422. In this mode, Baud rate must be manually configured via Bank 1 "BAUD" DIP-Switches 1 through 4. Please see the Baud Rate Configuration Table for details.

**Board-Mounted Bank 2 DIP-Switches:**

**Note that Bank 2 DIP-Switches are not accessible via software control, and must be configured physically.**

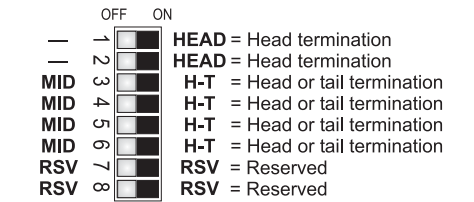

**Fig. 5 Bank 2 DIP-Switch Description**

**Bank2 SW1 and SW2: Head Termination "HEAD" DIP-Switches:**

Bank 2 Head Termination "HEAD" DIP-Switches 1 and 2 configure the RS422/485's termination setting by providing termination on the data line. When these DIP-Switches are in the LEFT "-" position (factory default), no termination is provided. Setting these DIP-Switches to the RIGHT "HEAD" position provides pull-up and pull-down on the data lines. See the Termination Table on page 8 and Fig. 6 for details.

**Note that both of the Head Termination "HEAD" DIP-Switches on a RS422/485 need to be set to the same position, failure to do so will result in unpredictable behavior.**


**Bank2 SW3 through SW6: Mid Termination "MID/H-T" DIP-Switches:**

Bank 2 Mid Termination "MID/H-T" DIP-Switches 3 through 6 configure the RS422/485's termination setting by


providing parallel terminations. When these DIP-Switches are in the "MID" position (factory default), no termination is provided. Setting these DIP-Switches to the "H-T" position provides parallel termination. See the Termination Table and Fig. 6 for details.

**Note that all of the Mid Termination "MID/H-T" DIP-Switches on a RS422/485 need to be set to the same position, failure to do so will result in unpredictable behavior.**

Termination Table						
Switch No.	Full-Duplex Mode			Half-Duplex Mode		
	Head	Tail	Mid	Head	Tail	Mid
1	OFF	OFF	OFF	ON	OFF	OFF
2	OFF	OFF	OFF	ON	OFF	OFF
3	ON	ON	OFF	ON	ON	OFF
4	ON	ON	OFF	ON	ON	OFF
5	ON	ON	OFF	ON	ON	OFF
6	ON	ON	OFF	ON	ON	OFF



**Fig. 6a Head and Tail Termination Application**

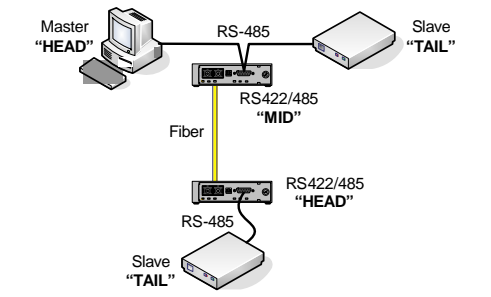


**Fig. 6b Mid and Head Termination Application**

For more information on using and configuring the RS422/485 via software control, please refer to the *NetOutlook™* Management Software user manual.


**PORT STRUCTURE:**

**Front-Panel Ports:**

The front-panel of the *iConverter* RS422/485 features one fiber port (P1) and one RS-422/485 capable serial port (P2). Depending on the model, the serial port is available either as a DB-9 female connector or as a terminal block for field wiring. Please refer to Fig. 1a, Fig. 1b and the Pin-Out Signal Assignment Table for connector pin-out assignment.



**Fig. 1a DB-9 Connector Pin-Out Assignment**

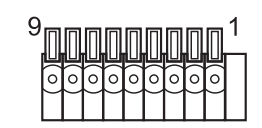

**Fig. 1b Terminal Block Pin-Out Assignment**

Pin-Out Signal Assignment Table				
PIN No.	Full-Duplex		Full-Duplex	Half-Duplex
	Normal (Point-to-Point)	Multi-Point	Multi-Point	Multi-Point
	Signal	DTE	DCE	-
1	Ground	-	-	Reserved
2	RTS+	OUT	IN	Reserved
3	RTS-	OUT	IN	Reserved
4	TXD+	OUT	IN	TXD+ (IN) DATA+
5	TXD-	OUT	IN	TXD- (IN) DATA
6	CTS+	IN	OUT	Reserved
7	CTS-	IN	OUT	Reserved
8	RXD+	IN	OUT	RXD+ (OUT) Reserved
9	RXD-	IN	OUT	RXD- (OUT) Reserved

**DIP-SWITCH SETTINGS:**

**Front-Panel DIP-Switches**



**Fig. 2 Front-Panel DIP-Switches**

**SW1: Normal and Fiber Loop-Back "Norm - FLB" DIP-Switch:**

When the Normal and Fiber Loop-Back "Norm - FLB" DIP-Switch is in the normal mode "Norm" position (factory default), the Fiber Loop-Back is disabled. Setting this DIP-Switch to the "FLB" position on the RS422/485 at either end of the fiber segment will enable the Fiber Loop-Back test. When Fiber Loop-Back is enabled, the local RS422/485 with the DIP-Switch in "FLB" position is the master, and the remote RS422/485 with the DIP-Switch in "Norm" position is the slave. The "Tst" LED on the master will blink rapidly (10 times per second) and the "Tst" LED on the slave will blink slowly (once per second) if the fiber segment passes the Loop-Back test. If the fiber segment fails the Loop-Back test, the "Tst" LED will remain solid on the master unit.

**Note that the Fiber Loop-back test does not interfere with serial conversion and signal transmission.**


**Note that if both RS422/485 on the ends of a fiber segment are set to the "FLB" position during the Loop-back test, then both RS422/485 would still display valid master mode results.**

**SW2: Serial "DCE - DTE" DIP-Switch:**


When the "DCE - DTE" DIP-Switch is in the "DCE" position (factory default), the RS422/485 is configured to connect to Data Communications Equipment such as a modem or printer. Setting this DIP-Switch to the "DTE" position configures the RS422/485 to connect to Data Terminal Equipment such as a computer or controller. Please refer to the PORT STRUCTURE section of this manual for more details.

**Note that the "DCE - DTE" DIP-Switch is disabled if the RS422/485 is in Half-Duplex mode or in Multi-point mode.**

**Board-Mounted DIP-Switches:**

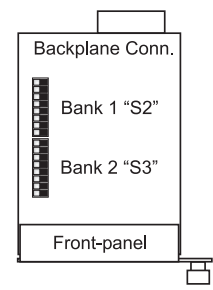

**Fig. 3 Board-Mounted DIP-Switches**

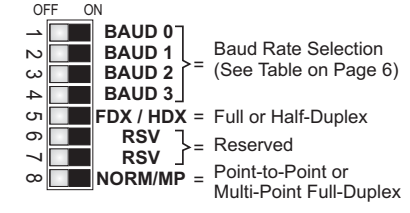

**Fig. 4 Bank 1 DIP-Switch Description**

**Bank1 SW1 through SW4: Baud Rate Selection for RS-485 "BAUD" DIP-Switches:**

Bank 1 "BAUD" DIP-Switches 1 through 4 configure the baud rate when the RS422/485 is operating in Half-Duplex mode or in Multi-point Full-Duplex mode. These DIP-Switches are deactivated when the RS422/485 is operating in point-to-point Full-Duplex RS-422 Mode. Please see the Baud Rate Configuration Table for details.

Baud Rate DIP-Switch Configuration Table				
Baud Rate	SW1	SW2	SW3	SW4
110	L	L	L	L
300	R	L	L	L
1200	L	R	L	L
2400	R	R	L	L
4800	L	L	R	L
9600	R	L	R	L
19.2K	L	R	R	L
38.4K	R	R	R	L
57.6K	L	L	L	R
115K	R	L	L	R
230K	L	R	L	R
460K	R	R	L	R
921K	L	L	R	R
921K	R	L	R	R
921K	L	R	R	R
921K	R	R	R	R

L designates the LEFT (OFF) position of the DIP-switch  
 R designates the RIGHT (ON) position of the DIP-switch

**Bank1 SW5: Full/Half-Duplex "FDX/HDX" DIP-Switch:**

When the Full/Half-Duplex selection DIP-Switch is in the LEFT "FDX" position (factory default), the RS422/485 operates in serial Full-Duplex mode. Configuring the DIP-Switch to the RIGHT "HDX" position enables serial Half-Duplex mode, often used by the RS-485 protocol. When the RS422/485 is in Half-Duplex mode, the point-to-point/Multi-point DIP-Switch has no effect. Configure the Half-Duplex Baud rate with Bank 1 DIP-Switches 1 through 4.

**Bank1 SW6 and SW7: "RSV" DIP-Switches:**

DIP-Switches 6 and 7 in Bank 1 are reserved for factory use and must be kept in the LEFT position.

**Bank1 SW8: Full-Duplex Normal/Multi-Point "NORM/MP" DIP-Switches:**

This DIP-Switch has no effect if the RS422/485 is in Half-Duplex mode. When this DIP-Switch is in the LEFT

**MOUNTING AND CABLE ATTACHMENT:**

*iConverter* modules are hot-swappable and can be installed into any chassis in the *iConverter* family.

- After configuring the DIP-Switches, carefully slide the *iConverter* module into the installation slot, aligning the module with the installation guides. Ensure that the module is firmly seated against the Backplane.
- Secure the module by fastening the panel thumb screw (attached to the module) to the chassis front.
- Attach the serial ports via a DB-9 serial cable (or an open-end serial cable) to a serial RS-422 or RS-485 device.
- Attach the fiber port via an appropriate multimode or single-mode fiber cable to a 100BASE-FX Fast Ethernet device. The *iConverter* transmit (Tx) must attach to the receive side on the other device; the receive (Rx) must attach to the transmit side.
- When using single-fiber (SF) media converter models, the Tx wavelength on one end has to match the Rx wavelength on the other. Note that based on this guideline, the SF media converter models must be used in pairs, such as the 8790-1 matched with the 8791-1.

**RS422/485 LED INDICATORS:**

LED Function "Legend"	Color	Off State	On States
Power "Pwr"	Amber	No Power	Module has power
Fiber Loop-back Test "Tst"	Green	Normal Mode	Solid: Master mode Tx pattern sent, but no Rx received 10 Hz (Blinking 10x per second); Master mode, Tx pattern sent, and Rx pattern received 1 Hz (Blinking once per second); Slave mode, Rx pattern received
Fiber Link and Activities "Act"	Green	No Fiber Link	Solid: Fiber Link Active Blinking: Fiber Data Transmission
"DTE" Mode	Green	DTE mode not selected	DTE mode selected
"DCE" Mode	Green	DCE mode not selected	DCE mode selected
Serial Activities "Act"	Green	No serial data	Serial data received

**TECHNICAL SUPPORT:**

For help with this product, contact our Technical Support:  
 Phone: (949) 250-6510  
 Fax: (949) 250-6514  
 Address: Omnitron Systems Technology, Inc.  
 140 Technology Dr., #500  
 Irvine, CA 92618 USA  
 E-mail: support@omnitron-systems.com  
 URL: www.omnitron-systems.com

**RS422/485 SPECIFICATIONS:**

Model Type	RS422/485
Protocols	Asynchronous Serial RS-422, Serial RS-485
Copper Connectors	DB-9 Female or Terminal Block
Fiber Connectors	ST, SC, MT-RJ, LC
Controls	DTE/DCE, Fiber Loop-Back, Baud Rate, Termination
LED Displays	Power, Test, Fiber Lnk/Act, DTE, DCE, Serial Act
Dimensions	W:0.85" x D:4.5" x H:2.8"
Weight	8 oz.
Compliance	UL, CE, FCC Class A
Power Requirement	0.5A @ 3.3VDC (typical)
Temperature	Standard: 0 to 50° C Wide: -40 to 60° C Storage: -40 to 80° C
Humidity	5 to 95% (non-condensing)
Altitude	-100m to 4000m
MTBF (hrs)	850,000

**Warning**

The operating description in this Instruction Manual is for use by qualified personnel only. To avoid electrical shock, do not perform any servicing of this unit other than that contained in the operating instructions, unless you are qualified and certified to do so by Omnitron Systems Technology, Inc.

**Warranty**

This product is warranted to the original purchaser against defects in material and workmanship for a period of TWO YEARS from the date of shipment. A LIFETIME warranty may be obtained by the original purchaser by REGISTERING this product with Omnitron within 90 days from the date of shipment. TO REGISTER, COMPLETE AND MAIL OR FAX THE ENCLOSED REGISTRATION FORM TO THE INDICATED ADDRESS. Or you may register your product on the Internet at www.omnitron-systems.com. During the warranty period, Omnitron will, at its option, repair or replace a product which is proven to be defective.

For warranty service, the product must be sent to an Omnitron designated facility, at Buyer's expense Omnitron will pay the shipping charge to return the product to Buyer's designated US address using Omnitron's standard shipping method.

**Limitation of Warranty**

The foregoing warranty shall not apply to defects resulting from improper or inadequate use and/or maintenance of the equipment by Buyer, Buyer-supplied equipment, Buyer-supplied interfacing, unauthorized modifications or tampering with equipment (including removal of equipment cover by personnel not specifically authorized and certified by Omnitron), or misuse, or operating outside the environmental specification of the product (including but not limited to voltage, ambient temperature, radiation, unusual dust, etc.), or improper site preparation or maintenance.

No other warranty is expressed or implied. Omnitron specifically disclaims the implied warranties of merchantability and fitness for any particular purpose.

**Exclusive Remedies**

The remedies provided herein are the Buyer's sole and exclusive remedies. Omnitron shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any legal theory.